

Menu availability for each user level

NOTE *1 : "-" represents invalid, "△" represents display only, and "●" represents available.

*2 : If a version is specified, the menu is available for the version or higher.

| Menu tree | User level (*1) | | | Version (*2) |
|---------------------------------|-----------------|------------|----------|--------------|
| | Operator | Programmer | Mentener | |
| F1 Program (Edit) | ● | ● | ● | |
| F1 New | - | ● | ● | |
| F2 Delete | - | ● | ● | |
| F3 Copy | - | ● | ● | |
| F4 Paste | - | ● | ● | |
| F5 Edit | △ | ● | ● | |
| F1 CreateNew | - | ● | ● | |
| F2 Cut | - | ● | ● | |
| F3 Copy | - | ● | ● | |
| F4 Paste | - | ● | ● | |
| F5 Edit | - | ● | ● | |
| F6 Save & CheckSyntax | - | ● | ● | |
| F7 Comment | - | ● | ● | |
| F8 Uncomment | - | ● | ● | |
| F9 Format | - | ● | ● | |
| F6 Aux | ● | ● | ● | |
| F1 Program settings | △ | ● | ● | |
| Program (tab) | △ | ● | ● | |
| SupervisoryTask (tab) | △ | ● | ● | |
| F5 Program parameters | △ | ● | ● | |
| F7 Start Supervisory | ● | ● | ● | |
| F8 Stop Supervisory | ● | ● | ● | |
| F10 Delete all static variables | - | ● | ● | |
| F11 Delete all programs | - | ● | ● | |
| F9 Encrypt / Decrypt | - | ● | ● | |
| F10 File Lock/Unlock | - | ● | ● | |
| F11 Rename | - | ● | ● | |
| F12 Check Syntax | - | ● | ● | |
| F1 Program (Run) | ● | ● | ● | |
| F1 Halt | ● | ● | ● | |
| F2 StepStop | ● | ● | ● | |
| F3 CycleStop | ● | ● | ● | |
| F4 Start | ● | ● | ● | |
| F6 StepStart | ● | ● | ● | |
| F7 Reset | ● | ● | ● | |
| F9 Priority | - | ● | ● | |
| F10 Continue Start | ● | ● | ● | |

Menu availability for each user level

NOTE *1 : "-" represents invalid, "△" represents display only, and "●" represents available.

*2 : If a version is specified, the menu is available for the version or higher.

| Menu tree | User level (*1) | | | Version (*2) |
|----------------------------|-----------------|-----------|----------|--------------|
| | Operator | Programer | Mentener | |
| F11 Display | ● | ● | ● | |
| F2 Arm | ● | ● | ● | |
| F1 PositionDisplayStyle | ● | ● | ● | |
| F3 Servo State | ● | ● | ● | |
| Monitor (tab) | ● | ● | ● | |
| CtrlLog (tab) | ● | ● | ● | |
| F6 Setting | ● | ● | ● | |
| ServoLog (tab) | ● | ● | ● | |
| F6 Setting | ● | ● | ● | |
| F4 Variable | ● | ● | ● | |
| F6 Aux | ● | ● | ● | |
| F1 Config | △ | ● | ● | |
| F2 Collision/Interference | ● | ● | ● | Ver.2.5.0 |
| F1 Collision Detection | △ | ● | ● | Ver.2.7.0 |
| F2 Virtual Fence | ● | ● | ● | Ver.2.5.0 |
| F1 Start Monitoring | ● | ● | ● | " |
| F2 Stop Monitoring | ● | ● | ● | " |
| F7 setting | △ | ● | ● | " |
| F3 Tool | △ | ● | ● | |
| F4 EasyEdit | - | ● | ● | |
| F4 Work | △ | ● | ● | |
| F4 EasyEdit | - | ● | ● | |
| F5 Area | △ | ● | ● | Ver.2.5.0 |
| F4 Easy Edit | - | ● | ● | |
| F7 Detail | △ | ● | ● | |
| F6 PathPoint | △ | ● | ● | |
| F7 Display Settings | ● | ● | ● | |
| F10 Base | △ | ● | ● | |
| F4 EasyEdit | △ | ● | ● | |
| F11 Exclusive Control | ● | ● | ● | Ver.2.7.0 |
| F1 Exclusive Area | △ | ● | ● | |
| F2 Exclusive Communication | △ | ● | ● | |
| F3 Exclusive Monitoring | - | - | ● | |
| F7 Start Monitoring | ● | ● | ● | |
| F8 Stop Monitoring | ● | ● | ● | |
| F12 Maintenance | ● | ● | ● | |
| F1 Brake | ● | ● | ● | |

Menu availability for each user level

NOTE *1 : "-" represents invalid, "△" represents display only, and "●" represents available.

*2 : If a version is specified, the menu is available for the version or higher.

| Menu tree | User level (*1) | | | Version (*2) |
|--|-----------------|------------|----------|--------------|
| | Operator | Programmer | Mentener | |
| F7 CALSET | - | - | ● | |
| F1 CALSET | - | - | ● | |
| F2 Recover CALSET data | - | - | ● | |
| F3 Input Number | - | - | ● | |
| F8 Motion Space | △ | ● | ● | |
| F3 Variable | ● | ● | ● | |
| F1 Prev | ● | ● | ● | |
| F2 Next | ● | ● | ● | |
| F3 Jump To | ● | ● | ● | |
| F4 Move To (for P, J, and T only) | ● | ● | ● | |
| F5 Edit | - | ● | ● | |
| F6 Get Position (for P, J, and T only) | - | ● | ● | |
| F8 Copy | ● | ● | ● | |
| F9 Paste | - | ● | ● | |
| F10 Switch Display | ● | ● | ● | |
| F11 Robot | ● | ● | ● | |
| F12 Aux | ● | ● | ● | |
| F1 Number of Variables | △ | ● | ● | |
| F2 Delete all Variables | - | ● | ● | |
| F4 I/O | ● | ● | ● | |
| F1 Prev | ● | ● | ● | |
| F2 Next | ● | ● | ● | |
| F3 Jump To | ● | ● | ● | |
| F4 Dummy / Smart | ● | ● | ● | |
| F5 ON / OFF | ● | ● | ● | |
| F6 Aux | ● | ● | ● | |
| F1 I/O Information | ● | ● | ● | |
| F2 I/O Lock | ● | ● | ● | |
| F5 I/O Parameters | △ | ● | ● | |
| F5 Panel | ● | ● | ● | |
| F6 Setting | ● | ● | ● | |
| F1 Login | ● | ● | ● | |
| F5 Password change | ● | ● | ● | |
| F2 System Info | ● | ● | ● | |
| General (tab) | ● | ● | ● | |
| F6 VRC Setting | - | - | ● | |
| Robot (tab) | ● | ● | ● | |

Menu availability for each user level

NOTE *1 : "-" represents invalid, "△" represents display only, and "●" represents available.

*2 : If a version is specified, the menu is available for the version or higher.

| Menu tree | User level (*1) | | | Version (*2) |
|----------------------------------|-----------------|-----------|----------|--------------|
| | Operator | Programer | Mentener | |
| Controller (tab) | ● | ● | ● | |
| F1 Device info | ● | ● | ● | |
| F2 CPU info details | ● | ● | ● | |
| F3 Memory info details | ● | ● | ● | |
| F4 Disc info details | ● | ● | ● | |
| F3 Pendant and Panel | ● | ● | ● | |
| F1 Language | ● | ● | ● | |
| F2 Pendant Setting | ● | ● | ● | |
| F3 Panel Settings | △ | ● | ● | |
| F4 Operation and Error Log | ● | ● | ● | |
| F5 Communication and Token | ● | ● | ● | |
| F1 Executable Token | - | ● | ● | |
| F2 Network and Permission | △ | ● | ● | |
| F3 Data Communication | △ | ● | ● | |
| F5 Edit (For COM Selection) | △ | ● | ● | |
| F5 Edit (For Ethernet Selection) | △ | ● | ● | |
| F6 Set COM Port Number | - | ● | ● | |
| F4 OPC-UA Server | △ | ● | ● | |
| F7 Ping | ● | ● | ● | |
| F6 Data Read and Write | - | ● | ● | |
| F1 Project Read and Write | - | ● | ● | |
| F7 Date and Maintenance | ● | ● | ● | |
| F1 Date and Maintenance | △ | ● | ● | |
| F2 Controller Battery | △ | ● | ● | |
| F8 Option | ● | ● | ● | |
| F1 Extension | △ | ● | ● | |
| F2 Program-Priority mode | ● | ● | ● | |
| F8 Version Up | - | - | ● | Ver.2.7.0 |
| F9 MCU VersionUp | - | - | ● | " |
| F10 MCU Reset | - | - | ● | " |
| F10 Cobotta | ● | ● | ● | Ver.2.5.0 |
| F1 RiskAssessor password | ● | ● | ● | Ver.2.7.0 |
| F2 Diagnosis | ● | ● | ● | " |
| F4 Packing position | ● | ● | ● | " |
| F6 Parameters | - | △ | ● | Ver.2.7.1 |
| F8 Vision | ● | ● | ● | |
| F1 Vision Calibration | △ | ● | ● | |

Menu availability for each user level

NOTE *1 : "-" represents invalid, "△" represents display only, and "●" represents available.

*2 : If a version is specified, the menu is available for the version or higher.

| Menu tree | User level (*1) | | | Version (*2) |
|---------------------------------------|-----------------|------------|----------|--------------|
| | Operator | Programmer | Mentener | |
| F2 IP address Setting | △ | △ | ● | |
| F3 Administrator and Password | - | - | ● | Ver.2.7.0 |
| F7 Build-in Vision (license required) | ● | ● | ● | |
| F9 Servo Hand | △ | ● | ● | |
| F11 MessageLog | ● | ● | ● | |