



HSR048 Bellows type
HSR048A1-S**-JNN
HSR048A1-S**-W5N

※The red bold line is the change point.

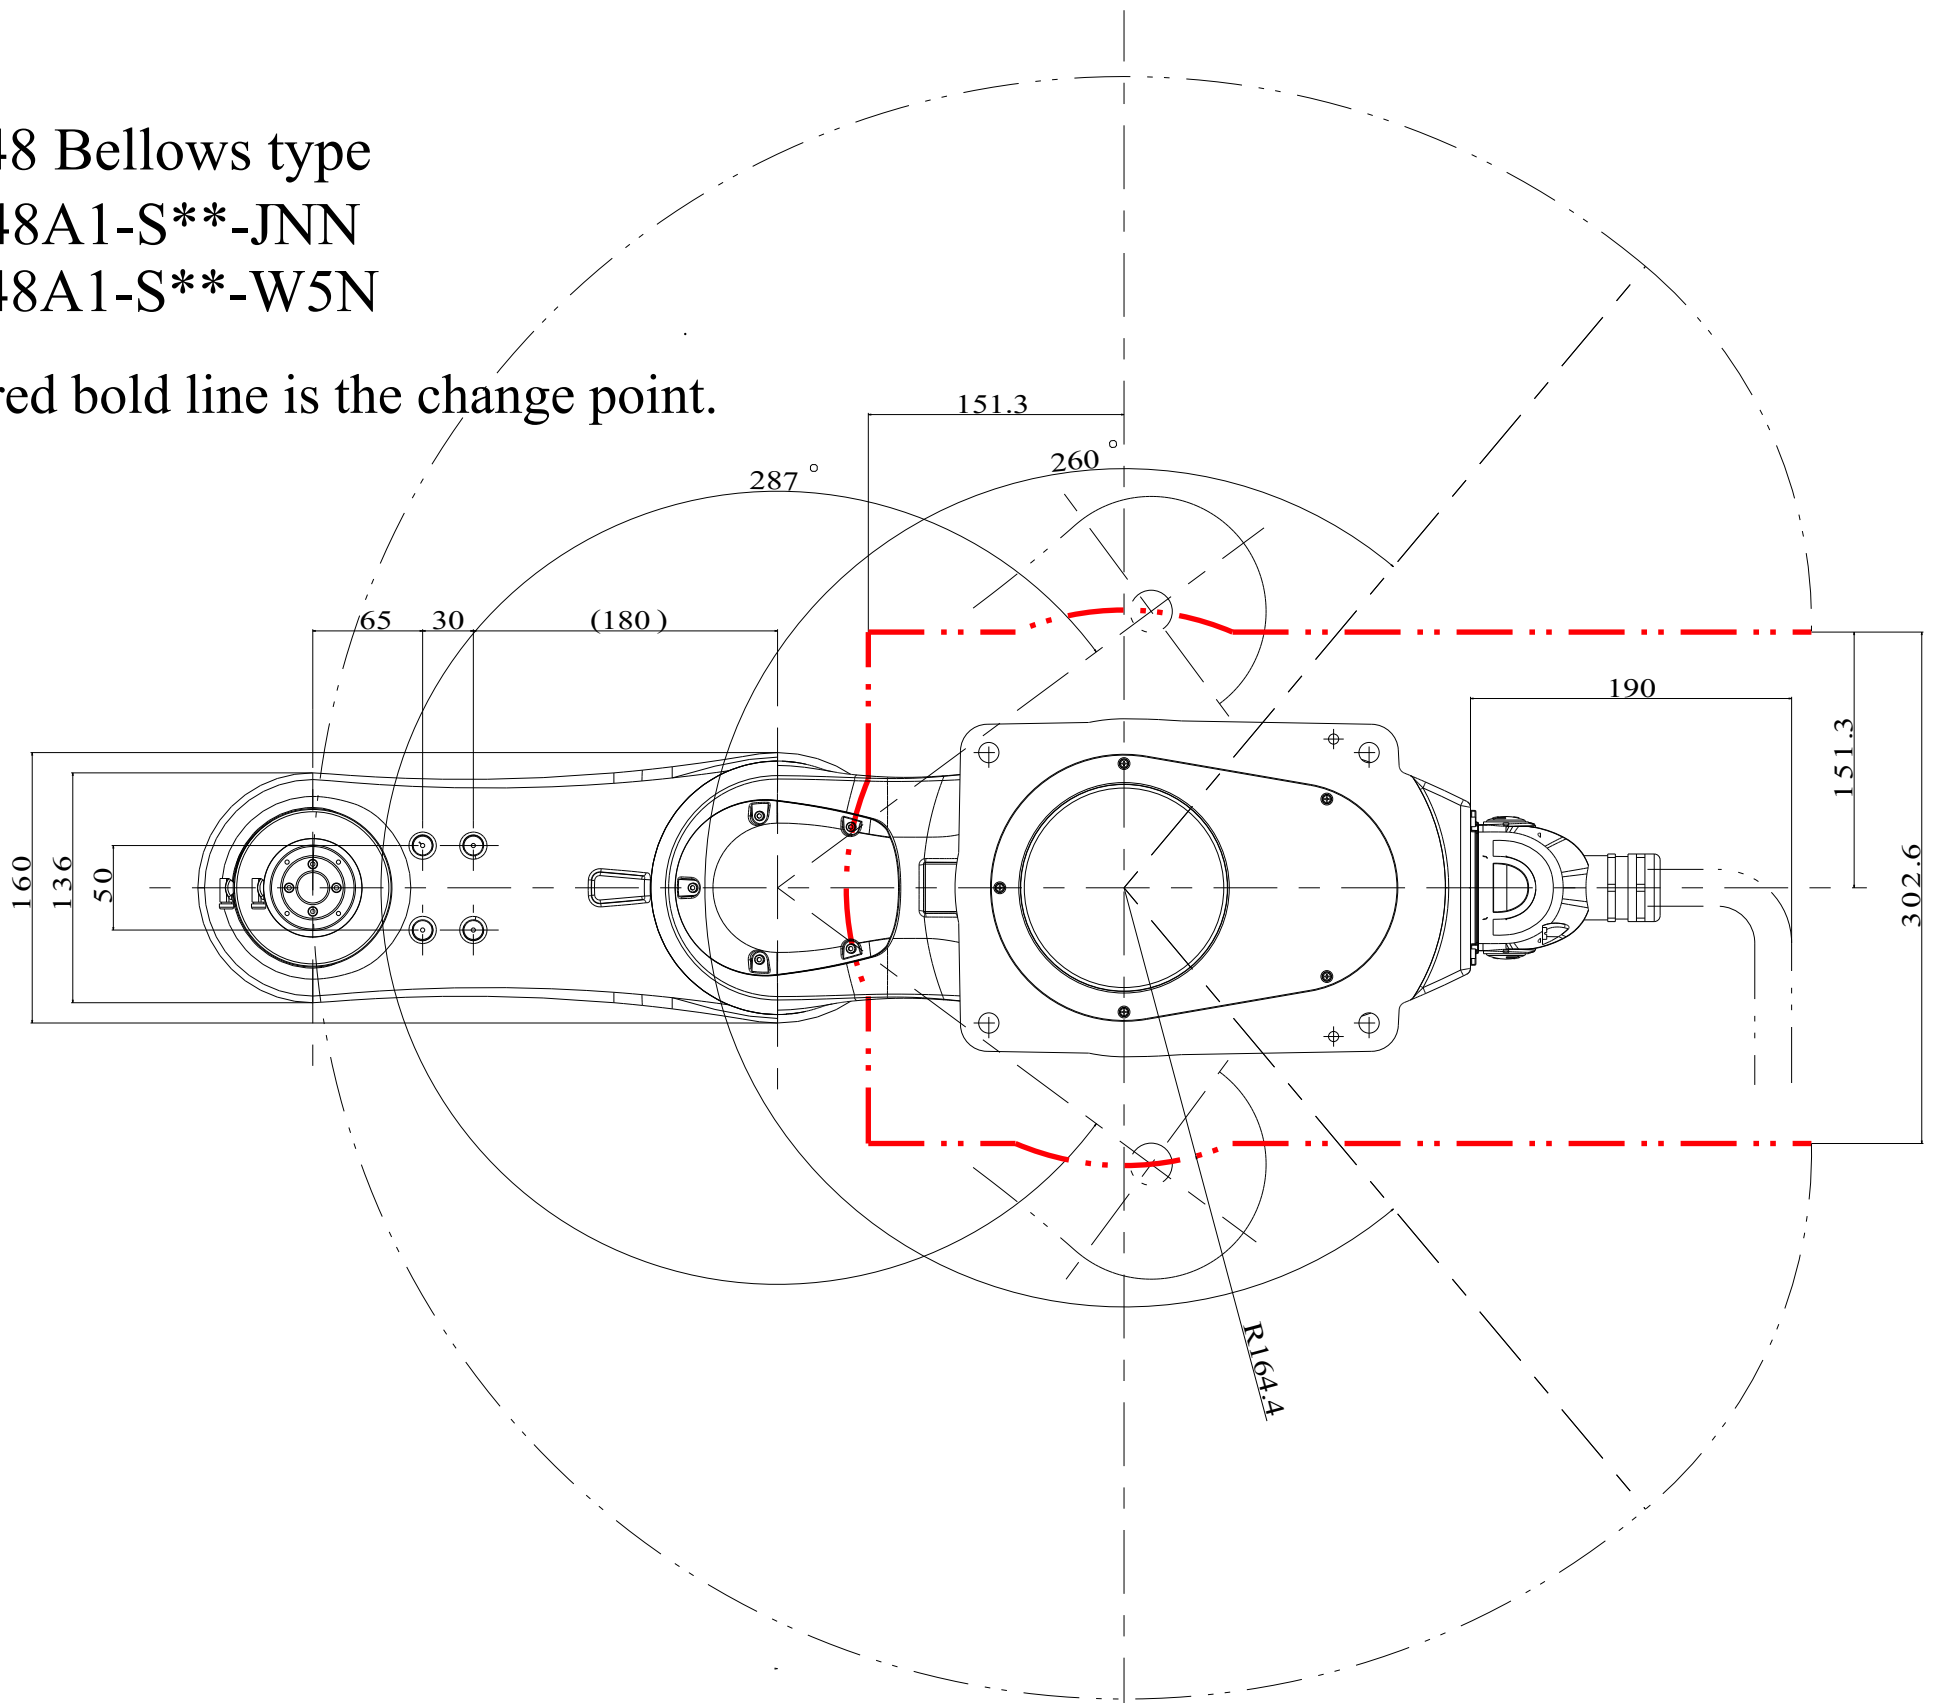

HSR055 Standard type
HSR055A1-S**-NNN

※The red bold line is the change point.

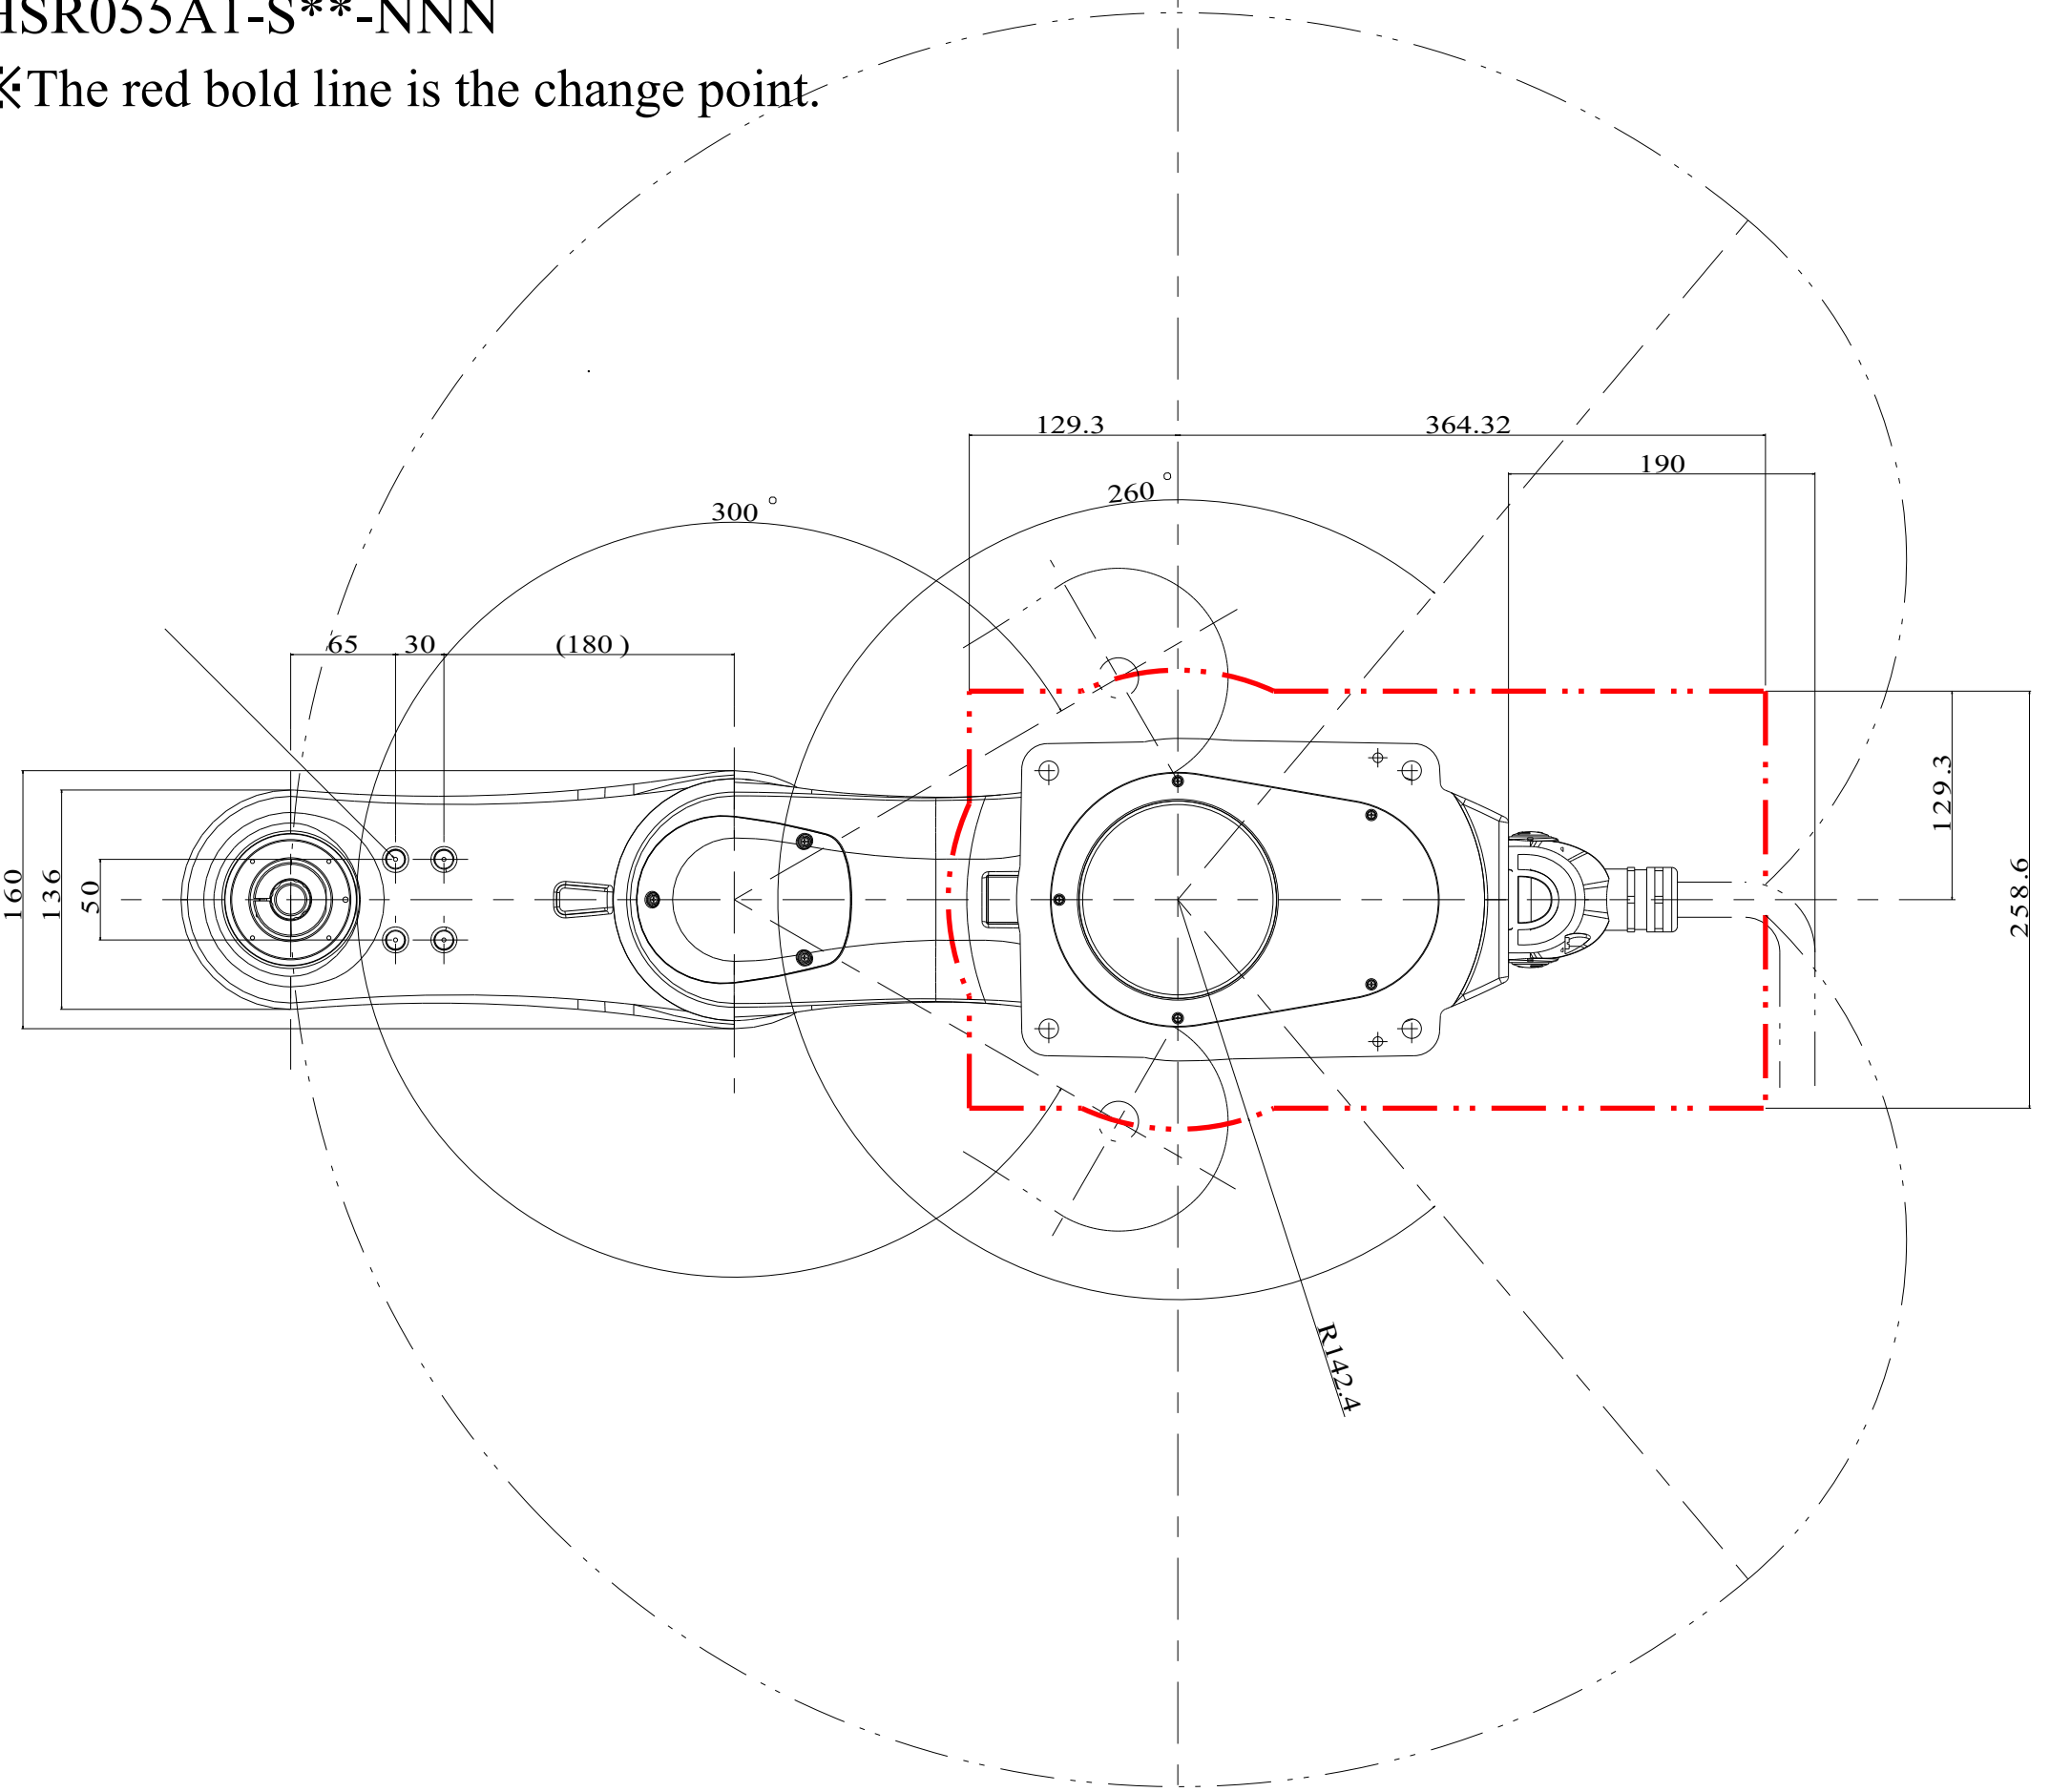

HSR055 Bellows type
HSR055A1-S**-JNN
HSR055A1-S**-W5N

※The red bold line is the change point.

