


Basic Screen

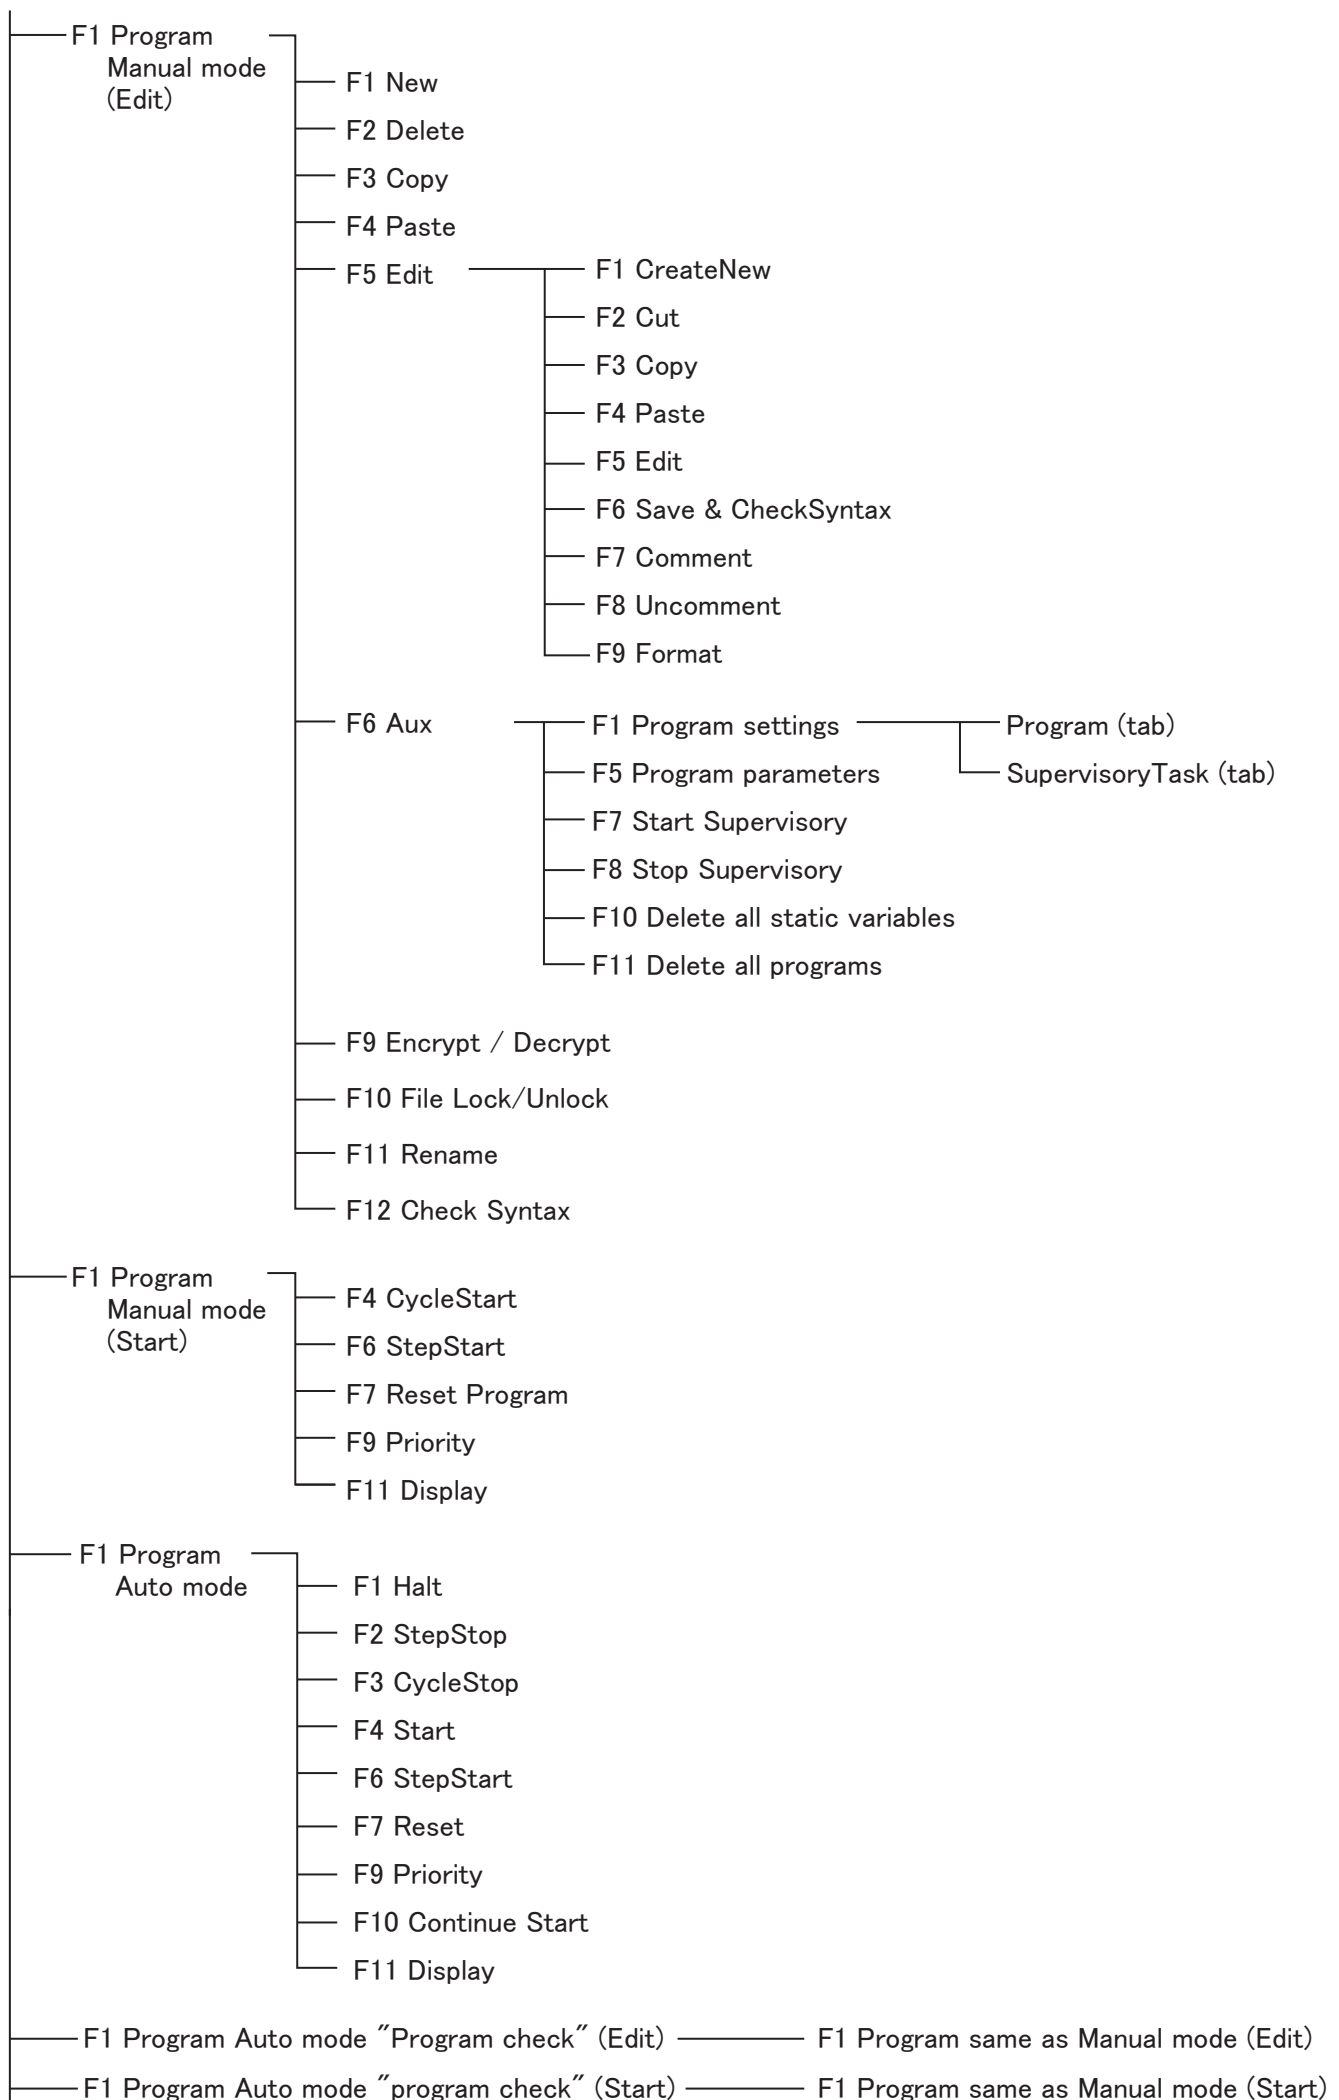

①

F2 Arm

F1 PositionDisplayStyle

F2 Force Control

F1 Swich Display

F2 Force Control Log

F5 Sensor

F6 Setting

F12 Detail setting

F3 Servo State

Monitor (tab)

CtrlLog (tab)

ServoLog (tab)

Estimate (tab)

F4 Variable

F1 Prev

F2 Next

F3 Jump To

F4 MoveTo (for P, J, and T only)

F5 Edit

F6 Get Position (for P, J, and T only)

F8 Copy

F9 Paste

F10 Switch Display

F11 Robot

F12 Aux

F1 Number of Variables

F2 Delete all variables

F6 Aux (Page 1)

F1 Config

F2 Collision/Interference

F3 Tool

F4 Work

F5 Area

F6 Pass Point

F7 Display Settings

F10 Base

F6 Aux (Page 2)

F6 Fig auto correction

F7 Origin return

F1 Calculate course

F2 Select start position

F5 Return move

F12 Maintenance

F1 Brake

F2 Encoder

F1 Encoder Info

F7 Reset encoder

F9 Encoder reference

F5 Safety Motion

F1 Monitor

F2 Register Ref pos

F3 Transmission Log

F7 CALSET

F1 CALSET

F2 Recover CALSET data

F3 Input Number

F8 Motion Space

F12 Service

F1 Acceleration Limit

F3 Motion

F4 FPGA update

F8 Brake Check setting

②

②

