
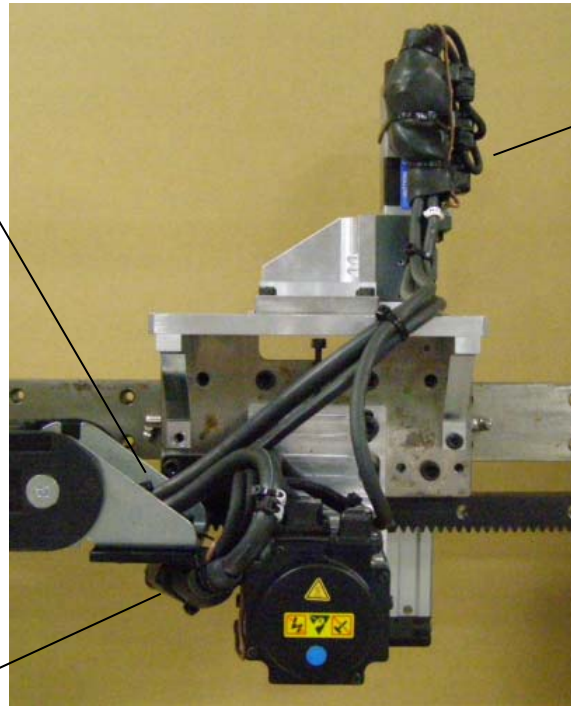



# LZNN

## Recommended wirings

Fix the motor and encoder cable into the cableveyor mounting stay with a cable tie.

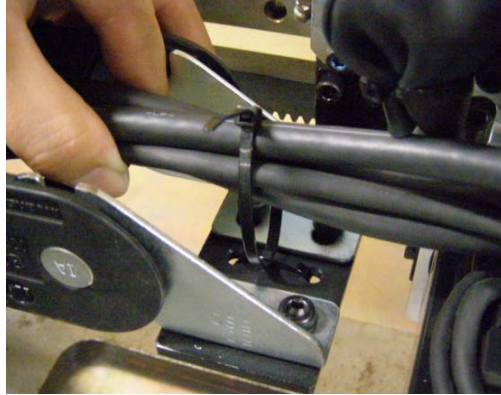

Wrap the Z-axis motor cable together with the connector part of the encoder cable with a sheet, and then fix them into the side of the Z-axis motor with cable ties.

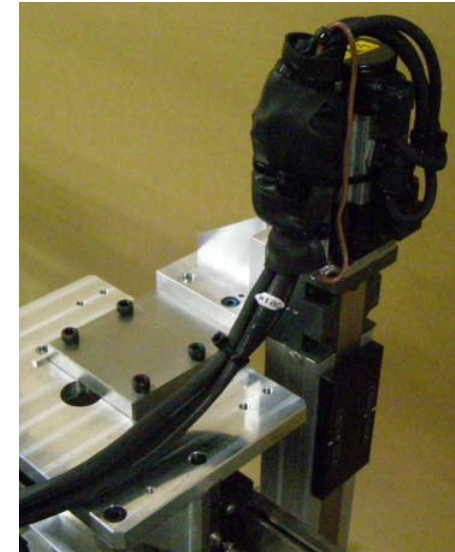

Wrap the L-axis motor cable together with the connector part of the encoder cable with a sheet, and then fix them into the cableveyor mounting stay cable ties.

