LYZN, LYZZ


Recommended wirings

Fix the motor and encoder cable into the cableveyor mounting stay with a cable tie.



Wrap the L-axis motor cable together with the connector part of the encoder cable with a sheet, and then fix them into the cableveyor mounting stay cable ties.



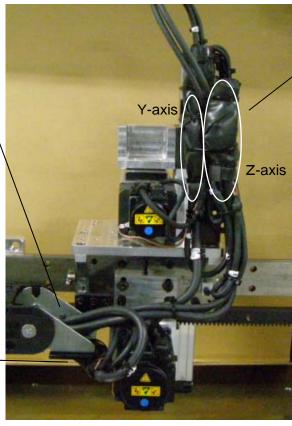

For the Y-axis and Z-axis, wrap each motor cable together with respective encoder cable's connector part with a sheet, and then fix them into the cable fixing stay with cable ties.

