
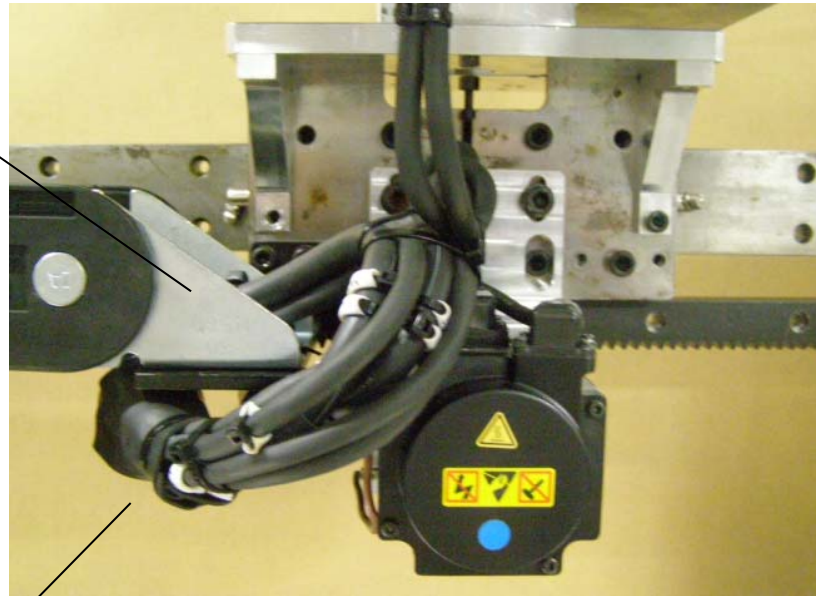


# LSNN, LSSN

Recommended wirings

Fix the motor and encoder cable into the cableveyor mounting stay with a cable tie.

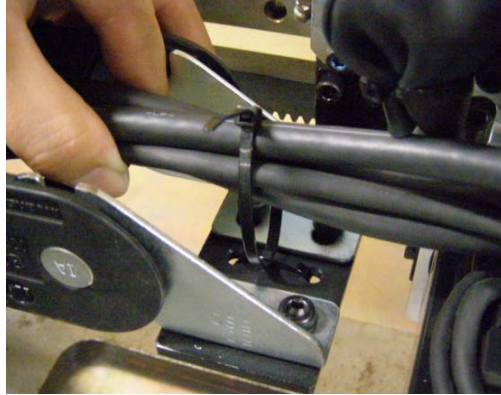

For the L-axis and S-axis, wrap each motor cable together with respective encoder cable's connector part with a sheet, and then fix them into the cableveyor mounting stay with cable ties.

